

ORION

INSTRUCTION MANUAL

HAIR CLIPPER

Model: OR-HC03

ENGLISH GB



1. SAFETY PRECAUTIONS

1. Do not reach for an appliance that has fallen into water. Unplug immediately. Some electrical parts inside the clipper are electrically living even with the switch off.
2. Do not use while bathing or in a shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
4. Except when charging, always unplug this appliance from the electrical outlet immediately after using and charging.
5. Unplug this appliance before cleaning.
6. Close supervision is necessary when this appliance is used by, on or near children or invalids.
7. Use this appliance only for its intended use, as described in this manual. Do not use attachments not recommended by the manufacturer.
8. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged or dropped into water. Return the appliance to a service center for examination and repair.
9. Keep the cord away from heated surfaces.
10. Never operate the appliance with the air openings blocked or while on a soft combustible surface, such as a bed or couch, where air openings may be blocked. Keep the air openings (if any) free from lint, hair or the like.
11. Never drop or insert any object into any opening on this appliance.
12. Do not use outdoors or operate with aerosol (spray) products or where oxygen is being administered.
13. Always attach plug to appliance first. To disconnect, turn all controls to OFF then remove plug from outlet.
14. Battery may be self-discharging. Charge the clipper before using it for the first time or when it has not been in use for long-term putting in place, the inner blade has the possibility of no operating or rotating power.
15. Do not put in place or charge the clipper where it will be the near of a heat source or exposed to direct sunlight.
16. When charging, push down switch, otherwise appliance can not be charged.

2. PARTS



- | | |
|-------------------|--------------------|
| 1. Cleaning brush | 5. Charging stand |
| 2. Guide comb | 6. Switch On/Off |
| 3. Comb | 7. Indicator light |
| 4. Main body | |

3. BEFORE USE

1. Before operating this unit, please read these instructions completely and keep the manual in a safe place.
2. Use only the included adaptor to charge the clipper. Always keep the adaptor dry.
3. The adaptor converts the input voltage AC 100-240V into an output voltage DC 5V.
4. Keep the adaptor away from water and handle it only with dry hands, never clean the adaptor under water.
5. Disconnect the power cord from the clipper before cleaning.

4. CHARGING

1. Charge the clipper where the temperature is above 0°C and below 40°C.
2. Rated input voltage of the clipper is DC5V. Avoid charging the clipper too long time since it will shorten the product life.
3. Connect the power cord of the adaptor to the clipper, and plug the adaptor to an AC outlet. Or connect the adaptor to the charger-base, plug the adaptor to an AC outlet and insert the clipper in the charger-base.

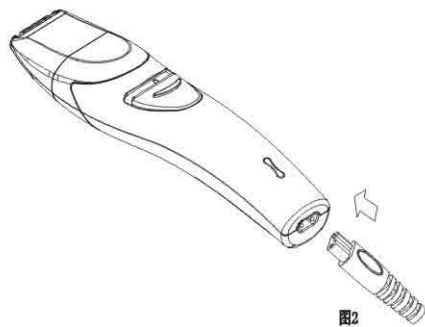 


图2


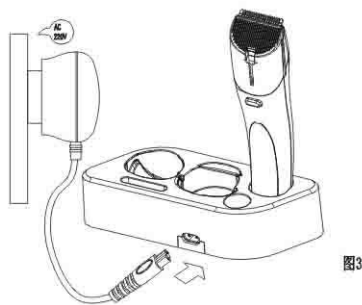 


图3

CAUTION!

1. Storage the battery for a long period may result in over-discharge, due to self-discharge. In this case charge the shaver before using.

 When you clean your clipper with fat-dissolving detergent (alcohol, etc.), please use a drop sewing machine oil to lubricate the clipper's head after cleaning.

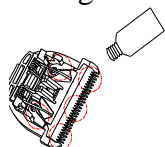

5. DISPOSAL OF BATTERY

Remove the built-in rechargeable battery before disposal of the shaver. Please make sure that the batteries are disposed of at an officially assigned location, it should not be mixed with general household waste.


1. Disconnect the power cord from the shaver
2. Wait until the inner blades stop turning.
3. Remove the screws und open the shaver.
4. Take out the batteries.

When the batteries are taken out, never connect the power cord to the shaver again!

6. TECHNICAL DATA

Power input	3W
Input voltage	5V DC
Rechargeable time	8 h

7. CORRECT DISPOSAL OF THIS PRODUCT

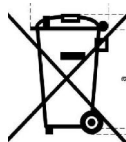

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Extra information on ORION company web-site www.orion.ua
 We take your opinion and offers by E-mail support@orion.ua