

INSTRUCTION MANUAL

HAIR STRAIGHTENER

Model: OR-FI06

ENGLISH GB

IMPORTANT SAFETY INSTRUCTIONS


- Do not operate this appliance if the cable or plug becomes damaged. A qualified electrician must always carry out any repairs that are necessary.
- If the appliance stops unexpectedly or appears to malfunction, switch off the power supply, unplug from the mains and stop using immediately. Seek professional advice to rectify the fault or make repairs.
- Keep the appliance and cable away from sources of heat, sharp objects or anything that may cause damage.
- Ensure the appliance is switched OFF before connecting to the mains power supply.
- Be aware that some surfaces may become hot. Do not touch and supervise others accordingly. The unit is VERY HOT when in use. Take care to avoid contact between the hot surface of the heating plate and bare skin, particularly around the ears, face and neck when in use.
- Care should be taken not to touch this part of the appliance when it is switched on or just after it has been turned off. **ALLOW AT LEAST 30 MINUTES TO COOL DOWN BEFORE PUTTING AWAY**
- Electrical appliances must always be stored in a secure place, out of reach of children.
- Children should be supervised to ensure that they do not play with the appliance.
- Close supervision is necessary when the appliance is being used near children.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- To protect against electric shock, never allow the appliance, the mains cable or plug to come into contact with water or any other liquid.
- Never reach for any appliance that has fallen into water. Switch off the power supply at the mains immediately and unplug. Do not re-use until the product has been inspected and approved by a qualified electrician.
- Keep the appliance away from non-heat-resistance surfaces and never cover the appliance with anything (e.g. clothing or towels) when it is hot.
- Always ensure that hands are dry before operating or adjusting any switch on the product or touching the plug and mains supply connections.
- Keep the appliance away from water. Do not use it near or over water contained in bath, washbasins, shower etc.
- Never leave the appliance unattended when connected to the mains power supply. To disconnect, first ensure that all controls are in the OFF position, then remove the plug from the electricity supply.
- Never wrap the mains cord around the appliance. Do not hang up by the power cord.
- Regularly check the mains cord for wear and damage, particularly where it enters the product and the plug.

TECHICAL CHARACTERISTICS

- Voltage: AC220V-240V~50/60Hz
- Power: 30W
- Rated current:0.14A
- Water proof:IPX0
- Net/Gross weight:290g/360g
- Product size: 245X34X41mm
- Gift box size: 270X80X45mm

PARTS

- A. Ceramic plate
- B. On/ Off Switch
- C. Indicator Light
- D. Power Cord

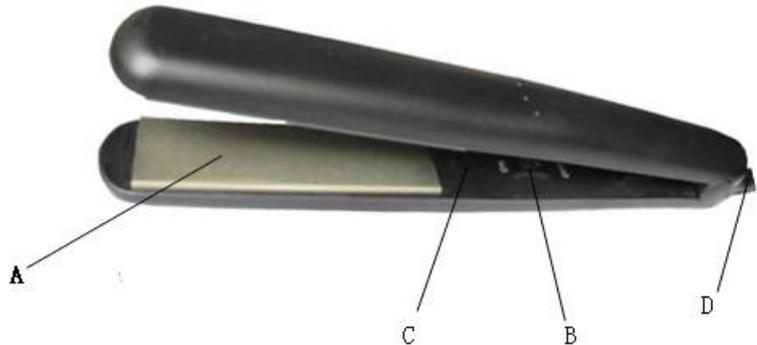

INSTRUCTIONS FOR USE

For best results, wash, comb and dry hair until just damp to touch – although the hair straightener can be used for touch ups at any time.

1. Fully unwind the mains cable , and plug the straightener into the mains socket and switch on the product.
2. Wait for 1 -2 minutes to allow the appliance to reach its working temperature.
3. Divide hair into manageable sections and clip the upper layers on top of your head and out of the way. Work with underneath layer first.
4. Take a small section of hair and pull hair down and away from your scalp and hold it taut.
5. Starting the roots, clamp hair firmly between the plates and run the straightener down the entire hair strand, from root to tip, in one smooth stroke. Do not hold it in one area for a long period of time.
6. Repeat with all the sections of your hairs.
7. When you are finishing styling, slide the on/off switch to turn the unit off, unplug the unit and allow it to completely cool down before cleaning or storing.

CLEANING AND MAINTENANCE:

1. The appliance must be unplugged before cleaning.
2. Let the appliance cool down before touching or cleaning.
3. Use the damp cloth to clean the plates and housing.
4. Do not use any harsh detergents, abrasives, solvents or cleaners. Never immerse in water to clean.
5. Dry thoroughly before use.

Do not replace the mains supply lead into the appliance – always use an authorised representative or qualified technician.